



Easy Installation Guide

Setting up one or more MusicLites with one transmitter, operating only one zone

1. Check MusicLites switches
 - Zone should be set to 1.
 - House Code should be set to 0.
 - Speaker channel will come set on Left + Right (mono). If you want to operate in full stereo (with a separate left and right speaker) switch one MusicLites module to left and the other MusicLites module to right.
2. Screw MusicLites into socket(s) with the light switch turned off. Turn light switch on and make sure MusicLites light turns on.
3. Next, set up transmitter:
 - For USB transmitter, insert USB plug into computer or USB audio device.
 - For Universal transmitter, plug transmitter into AC outlet and connect mini-jack cable between Toslink and your audio device.
 - For the Transmitter for iPod/iPhone/iPad, plug into 30-pin socket of your device (you can optionally plug transmitter into AC or run on battery). Make sure your transmitter is set for source 1.
4. Turn on your device (or open the program on your device to play audio) and make sure you are not on mute. The MusicLites should begin to play after a few seconds.
5. If the MusicLites do not play, hit (S1) on the remote control. Your transmitter will have a blue light on when it is synchronizing with the MusicLites.
6. Enjoy.

For information about setting up multiple MusicLites, zones, or transmitters, go to: www.musiclites.com/quickset-upguide.