

Instruction Manual

Ott-Lite Distributed by BLI Lighting Specialists

25W Belleair Floor Lamp

25N92BNK

25N92R7K


LAMP ASSEMBLY

- 1 Carefully unwrap the packing material from the lamp and shade.
- 2 Do not plug lamp into electrical outlet until all assembly is complete.
- 3 Insert the bottom stem (2) into the base (4). Tighten screw (3) using the enclosed allen wrench.
- 4 Holding the top stem, carefully pull cord through the opening in the bottom stem until the top stem meets the threads on the bottom stem.
- 5 Thread the top stem onto the bottom stem (1).
- 6 Unscrew the plastic shade holder (6) from the lamp socket (9).
- 7 Place the reflector (11) over the socket (9), followed by the shade (5) and screw the plastic shade/reflector holder (6), back onto the socket.
- 8 Insert the 25W swirl bulb (7) straight into the socket until a “click” sound is heard. To remove the bulb, pull it straight out of the socket. **Do not twist the bulb.**
- 9 To adjust the lamp height, loosen the joint (8) at the middle of the top pole by turning it counterclockwise. Once the height is in the desired position, tighten the joint (8) by turning it clockwise.
- 10 Plug the lamp into a 120V power source and depress the pedal power switch (10) to turn lamp on or off.

Please note that in operation, OTT-LITE® bulbs are not dimmable. Enjoy your OTT-LITE® Floor Lamp!

BULB INSERTION / REPLACEMENT

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 If the lamp has been in use, allow it to cool for approximately five minutes before proceeding.
- 3 To remove a bulb already installed in the lamp, grasp it firmly in your hand and pull it straight out of the socket. **Do not twist or turn the bulb while removing it from the socket.**
- 4 To install a bulb (7) in the socket, grasp the bulb firmly in your hand. Push the bulb straight into the socket (in alignment with the notches), by applying pressure to the base of the tube, until it “snaps” into place. Do not apply pressure to the glass end of the bulb.
- 5 Plug the lamp into a standard 120V socket, and your lamp is ready for use.

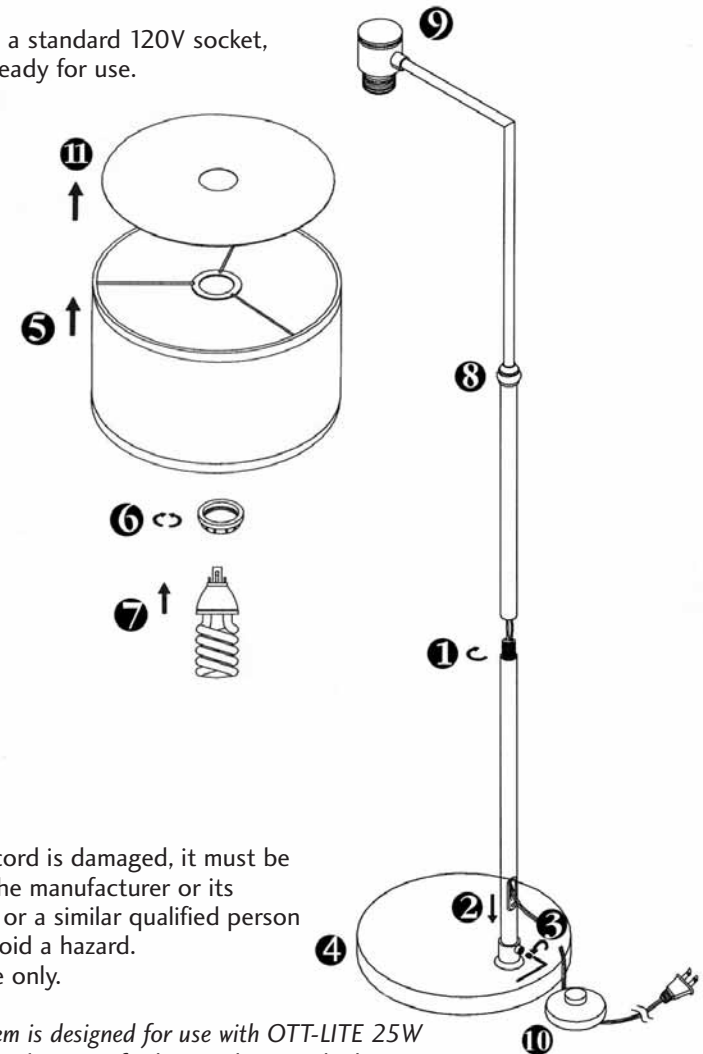

- ⓘ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
- ⓘ For indoor use only.

This lighting system is designed for use with OTT-LITE 25W fluorescent bulbs only. Use of other products voids the warranty and may result in damage to the lighting system.