

13W Jupiter Table Lamp

4134X2

Ott-Lite Distributed by BLI Lighting specialists

BULB INSERTION / REPLACEMENT

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 If the lamp has been in use, allow it to cool for approximately five minutes before proceeding.
- 3 To remove a bulb already installed in the lamp, grasp it firmly in your hand and pull it straight out of the socket. Do not twist or turn the bulb while removing it from the socket.
- 4 To install a bulb (H) in the socket, grasp the bulb firmly in your hand and push the bulb straight into the socket by applying pressure to the base of bulb, until it "snaps" into place (I, J). Do not apply pressure to the glass end of the bulb.
- 5 Plug the lamp into a standard 120V socket, and your lamp is ready for use.

LAMP ASSEMBLY

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 Line up holes at the bottom of lamp (D) to base plate (C). Insert screw (A) and tighten using enclosed tool.
- 3 To adjust lamp, turn nut screws (E, K) counter-clockwise to loosen. Adjust lamp to desired position and tighten nut screws by turning clockwise.
- 4 Close protective lid (G) to cover magnifier while not in use.

