



OTT-LITE
TECHNOLOGY®
The Science of Natural Light™

Ott-Lite Distributed by BLI Lighting Specialists

25W Crescent Floor Lamp

25U9246K

CAUTION! IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



BULB INSERTION/REPLACEMENT


Make sure the lamp is not plugged into an electrical outlet.

Installation:

- 1 Carefully remove the bulb (K) from its box. The bulb may be handled by the glass but, to avoid breakage, do not bump, drop, or put pressure on the glass.
- 2 Hold the lamp by the socket (B) and the bulb (K) by its base.
- 3 Align the bulb (K) with the holes in the socket (B) and firmly push. A “click” sound should be heard. Lightly tug on the bulb to ensure the socket has captured it.

Removal:

- 4 If the lamp has been in use, allow it to cool approximately five minutes before proceeding.
- 5 Hold the lamp by the socket (B) and firmly grasp the bulb by its base.
- 6 Unseat the bulb by slightly rocking it while firmly pulling on its base.

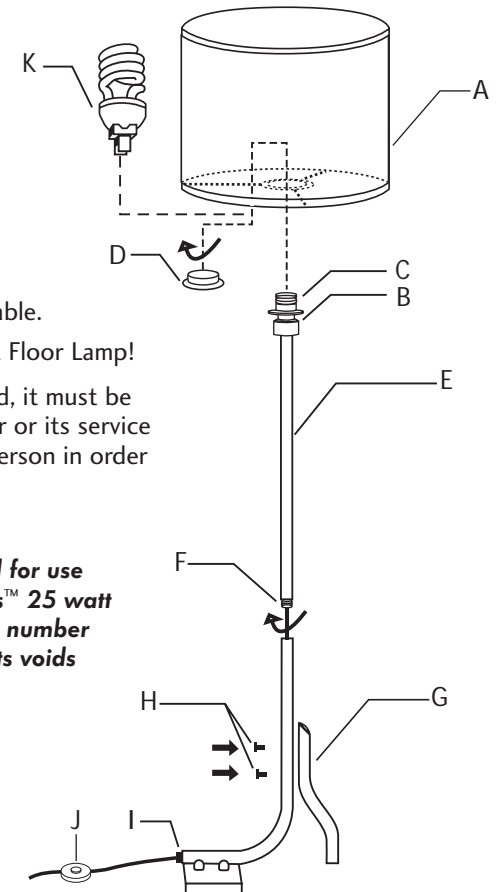

Please note that in operation, OTT-LITE® bulbs are not dimmable.

Enjoy your OTT-LITE® Crescent Floor Lamp!

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
- Indoor use only.

This lighting system is designed for use with OTT-LITE® VisionSaver Plus™ 25 watt replacement bulbs only (model number H3400K). Use of other products voids the warranty and may result in damage to the lighting system.

ASSEMBLY

- 1 Attach support leg (G) to main pole using support bolts (H). Use included tool to tighten bolts until snug (do not over tighten).
- 2 Set the lamp upright on its base.
- 3 If the threaded insert (F) is loose from the upper pole, simply screw it back into the upper pole before attaching it to the bottom pole. Carefully screw the upper pole (E) into the bottom pole by hand. Pull excess cord out of lower pole at point (I) of base. If necessary, loosen plastic screw (I) with tool provided. When finished, retighten screw (I).
- 4 Thread the bottom socket nut (C) almost to the bottom of the socket (B).
- 5 To install the shade (A), position its holding ring over the bulb socket (B) and let it rest on the bottom socket nut (C).
- 6 To secure the shade, finger-tighten the socket nut (D) onto the socket (B) while firmly holding the bottom socket nut (C) in place.
- 7 To install bulb, follow BULB INSERTION/REPLACEMENT instructions.
- 8 Plug the lamp into a standard 120V outlet. To turn lamp on or off, depress the pedal switch (J) located on the power cord.