


13W Wing Shade Floor Lamp

V11M01 L13554

TUBE INSERTION / REPLACEMENT

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 If the lamp has been in use, allow it to cool for approximately five minutes before proceeding.
- 3 Set the lamp upright on the floor.
- 4 Rotate the shade so that the notch in the base of the shade is positioned over the tab located on the socket assembly (refer to the diagram for proper shade position).
- 5 Remove the shade by pulling it straight out from the socket assembly.
- 6 To remove a tube already installed in the lamp, grasp it firmly in your hand and pull it straight out of the socket. Do not twist or turn the tube when removing it from the socket.
- 7 To install a tube in the socket, grasp the tube firmly in your hand, position the tube so that it is aligned as pictured in the diagram, then push the tube straight into the socket until it "snaps" into place.

- 8 To replace the shade, position it as indicated in the diagram, then push it back into the socket assembly making sure the shade "snaps" into place.
- 9 Rotate the shade to the desired position for use.
- 10 Plug the lamp into a standard 120V socket, and your lamp is ready for use.

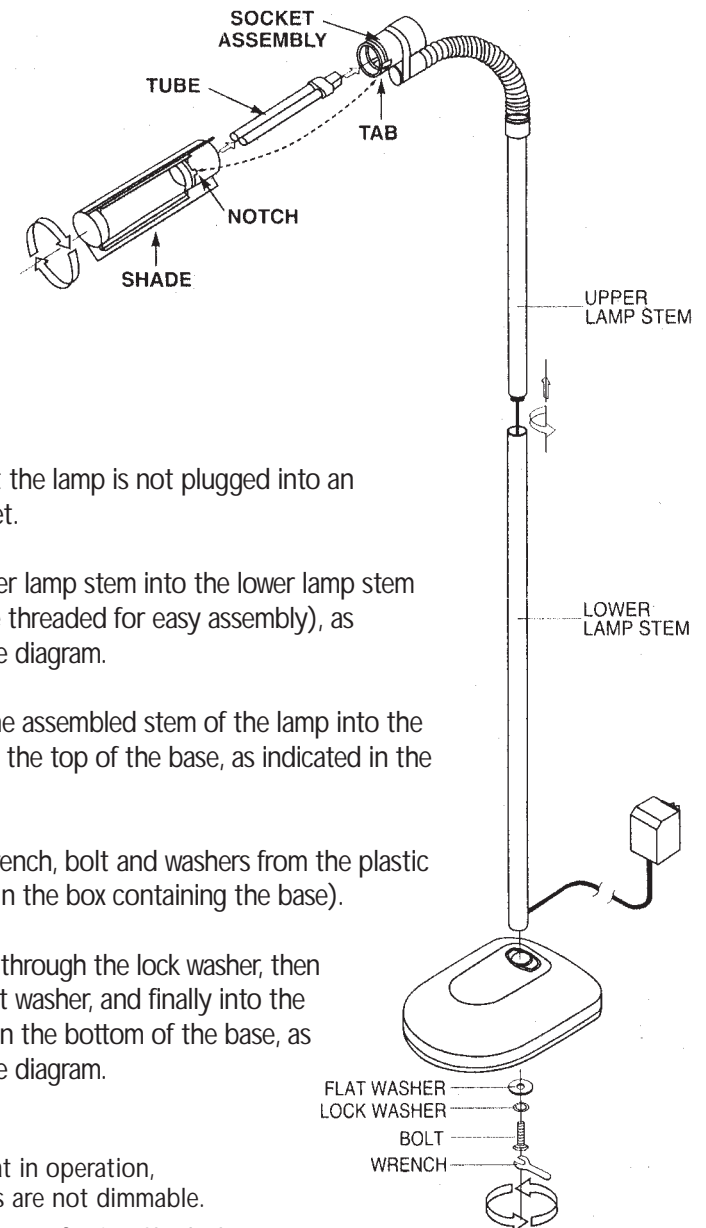

LAMP ASSEMBLY

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 Screw the upper lamp stem into the lower lamp stem (both ends are threaded for easy assembly), as indicated in the diagram.
- 3 Firmly insert the assembled stem of the lamp into the hole located in the top of the base, as indicated in the diagram.
- 4 Remove the wrench, bolt and washers from the plastic bag (included in the box containing the base).
- 5 Insert the bolt through the lock washer, then through the flat washer, and finally into the recessed hole in the bottom of the base, as indicated in the diagram.

Please note that in operation, OTT-LITE bulbs are not dimmable.

Enjoy your OTT-LITE® Wing ShadeFloor Lamp!