


13W Clamp-On Lamp

OTL13CLW

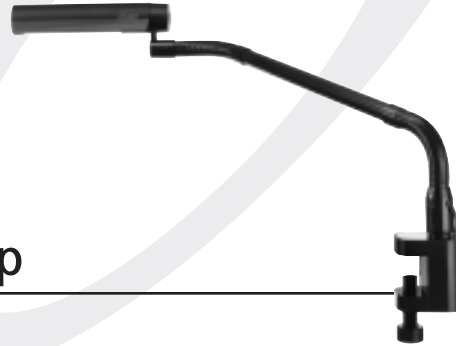

Note:

The arm of the Clamp-On Lamp (B) has been inserted, for packing purposes only, into the bottom of the clamp. For assembly, the arm (B) must be gently removed from the clamp and re-inserted into the opposite end of the clamp.


TUBE INSERTION / REPLACEMENT

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 If the lamp has been in use, allow it to cool for approximately five minutes before proceeding.
- 3 Rotate the shade so that the notch in the base of the shade is positioned over the tab located on the socket assembly (refer to the diagram for proper shade position).
- 4 Remove the shade by pulling it straight out from the socket assembly.
- 5 To remove a tube already installed in the lamp, grasp it firmly in your hand and pull it straight out of the socket. Do not twist or turn the tube while removing it from the socket.

- 6 To install a tube in the socket, grasp the tube firmly in your hand, position the tube so that it is aligned as pictured in the diagram, then push the tube straight into the socket until it “snaps” into place.
- 7 To replace the shade, position it as indicated in the diagram, then push it back into the socket assembly making sure the shade “snaps” into place.
- 8 Rotate the shade to the desired position for use.
- 9 Plug the lamp into a standard 120V socket, and your lamp is ready for use.

LAMP ASSEMBLY

- 1 Make sure that the lamp is not plugged into an electrical socket.
- 2 Attach clamp to table, shelf or other strong, solid surface. Secure clamp by turning screw until clamp is fastened tightly.
- 3 Slip dowel (B) at end of lamp into the hole on the clamp.
- 4 Plug the ballast (A) into a standard 120V socket, and your lamp is ready for use.

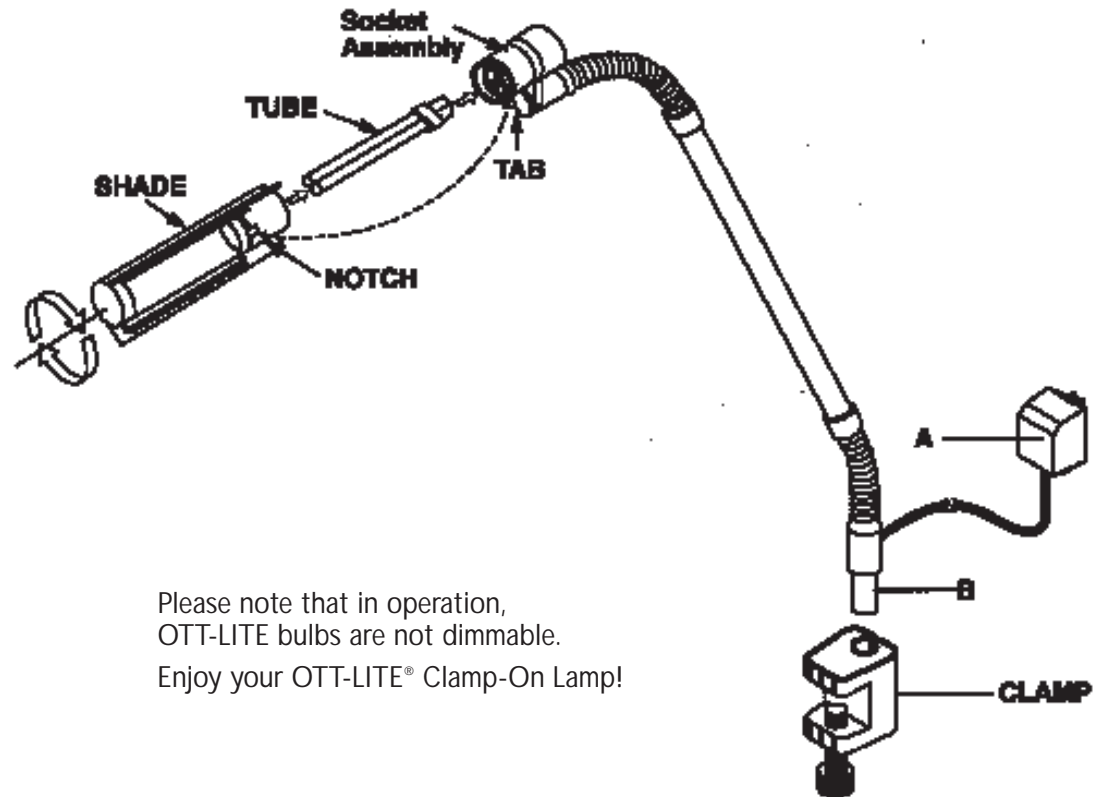

Please note that in operation, OTT-LITE bulbs are not dimmable.

Enjoy your OTT-LITE® Clamp-On Lamp!