

13W Vero Table Lamp

T59BNR

LAMP ASSEMBLY

WARNING: To prevent electric shock, make sure the lamp is not plugged in until all assembly steps are complete.

INSERT STARTER

- 1 Position the starter (B) so that the silver contacts line up with the holes in the starter holder. Press gently and turn clockwise until the starter locks into place.
- 2 Install the barrel handle (C) by placing it over the starter and screwing clockwise onto the lampshade bar.

BODY ASSEMBLY

CAUTION: To prevent possible head injury, drop the shade assembly all the way down and secure in place with tape.

- 1 Attach the lampshade assembly to the top of the main pole (D). Tighten or loosen the pivot joint (E) as needed using the thumbscrew (F).
- 2 If there is a plastic cover around the wires at the base of the main pole (D), remove it, being careful not to cut the wires. Push excess wire into the base.
- 3 Twist and tighten the main pole (D) onto the base (G) by hand.


BULB INSERTION / REPLACEMENT

CAUTION: If the lamp has been in use, allow it to cool approximately five minutes before proceeding.

- 1 Align the two pins at the end of the tube (H) with the slots in the shade (I) sockets.
- 2 Hold tube in place by grasping top of shade with hand and using thumbs to hold tube. Thumbs should be on the plastic ends of the tube.
- 3 Push tube ends into each socket and rotate 90 degrees in either direction until tube snaps into place.

OPERATION

- 1 Plug power cord into a standard wall outlet.
- 2 To turn the lamp on or off, depress the rocker switch located on the base (G).

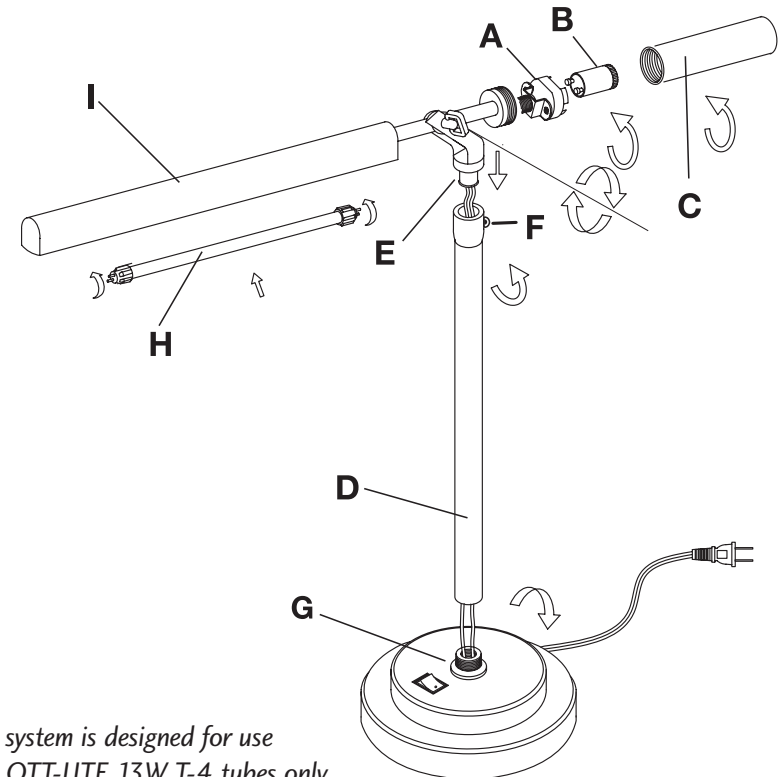

This lighting system is designed for use with genuine OTT-LITE 13W T-4 tubes only.

Use of other products voids the warranty and may result in damage to the lighting system.

Please note that in operation, OTT-LITE bulbs are not dimmable.

Enjoy your OTT-LITE® Vero Table Lamp!